



Product Contents

- 1 x Wireless Headphones
- 1 x Soft Carry Pouch
- 1 x Instruction Leaflet



**Infra Red Headphone
Instructions**
PLVWH1


The wireless headphones pick up the soundtrack via an infra red signal sent out by the transmitter in your DVD player. The channel selection switch on the headphones must match the channel selection of the DVD player (in the DVD player menu) to receive the corresponding sound track. If two DVD players are to be used in the same vehicle to watch two movies independently, set one to A and the second to B. Match receiving headphones accordingly to hear the correct soundtrack.

You can have as many pairs of these headphones as you like running from one DVD player.

Operating the Cordless Headphones

To operate the Headphones press the "Power" button on the right-hand earpiece and adjust the volume using the wheel marked "volume".

A red LED will shine to indicate that the headphones are turned on.

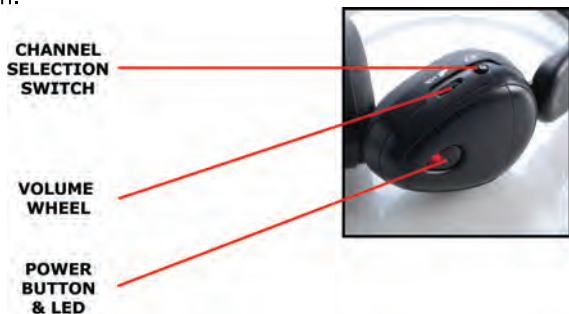

When switched on, the headphones will receive the soundtrack from the transmitter. When in a vehicle the signal will reflect around the interior enabling the headphones to pick up the sound track without having to be directly in front of the screen. When outside a vehicle you may need to sit more in line with the screen to enable the headphones to pick up the signal.

Changing the Headphone Batteries

The Headphones take two AAA batteries. Typically the batteries will last for 48 hours and a set of batteries is supplied with the headphones. When the batteries are running low the power LED will fade to indicate that new batteries are required.

- 1) Remove the battery cover from the left-hand earpiece by pushing the top of the cover in and sliding downwards.
- 2) Remove old batteries.
- 3) Insert two new AAA batteries taking care to match up the polarities correctly, i.e. + to + and - to -. Replace the cover



BATTERY COVER

Note - If the headphones are not going to be used for a long period of time please ensure the batteries are removed.

Automatic Switch Off

When no signal is detected, i.e. when the player is turned off, after 7 minutes the headphones will automatically switch themselves off. This helps to stop the batteries running out. To turn the headphones back on simply press the power button.